

SERIES 35-38 LENS REMOVAL INSTRUCTIONS



1. Choose any flat-head screwdriver. Insert the screwdriver between the inside of the fixture and the side of the endcap for the lens (as shown in the picture to the left).

Note: Do not try to pry the lens loose from any other location, except for the sides of the endcap attached to the lens.



2. With the flat-head screwdriver inserted between the inside of the fixture and the lens, pry that corner of the lens loose from the clip that is securing it into place. Be careful not to crack the endcap of the lens. Once the corner is raised, repeat the steps for the remaining corners.



3. When all the corners of the lens are loosened from their respective clips, simply lift the lens off the fixture (as shown in the picture to the left). Upon completion of the task that required the removal of the lens, place the lens back onto the fixture, making sure the clips secure the lens into place.